

AS/400: SST

SST — System Service Tools

Команда для входа:

STRSST

Основное меню

System Service Tools (SST)

Select one of the following:

1. Start a service tool

2. Work with active service tools

3. Work with disk units

4. Work with diskette data recovery

5. Work with system partitions

6. Work with system capacity

7. Work with system security

8. Work with service tools user IDs

Selection

F3=Exit

F10=Command entry

F12=Cancel

Определение позиции в которую установлен жесткий диск

В **ОСНОВНОМ МЕНЮ** выбрать 3. Work with disk units и клавишу Enter

Work with Disk Units

Select one of the following:

1. Display disk configuration

2. Work with disk configuration

3. Work with disk unit recovery

Selection

F3=Exit

F12=Cancel

Нажать 1. Display disk configuration и клавишу Enter

Display Disk Configuration

Select one of the following:

1. Display disk configuration status

2. Display disk configuration capacity

3. Display disk configuration protection

4. Display non-configured units

5. Display device parity status

6. Display disk hardware status

7. Display disk compression status

Selection

F3=Exit

F12=Cancel

Нажать 6. Display disk hardware status и клавишу Enter

Display Disk Hardware Status						
ASP	Unit	Serial Number	Type	Model	Resource Name	Hardware Status
1	1	21-D0001	4326	050	DD006	Operational
1	1	21-E0002	4326	050	DD003	Operational
1	5	21-E0003	4326	050	DD001	Operational

1	5	21-E0004	4326	050	DD002	Operational
1	6	21-E0005	4326	050	DD004	Operational
1	6	21-B0006	4326	050	DD007	Operational

Press Enter to continue.
F3=Exit F5=Refresh F9=Display disk unit details
F11=Display disk compression status F12=Cancel

Нажать F9=Display disk unit details

Display Disk Units

Type option, press Enter.
5=Display hardware resource information details

OPT	ASP	Unit	Serial Number	Type	Model	Resource Name	Status
	1	1	21-D0001	4326	050	DD006	Active
	1	1	21-E0002	4326	050	DD003	Suspended
	1	5	21-E0003	4326	050	DD001	Active
	1	5	21-E0004	4326	050	DD002	Active
	1	6	21-E0005	4326	050	DD004	Active
	1	6	21-B0006	4326	050	DD007	Active

Выбрать опцию 5 для нужного диска и клавишу Enter

Disk Unit Hardware Resource Information Details

Type : 4326
Model : 050
Level : 2
Serial Number : 21-E0002
Resource Name : DD003
Physical location:
Frame ID : 1
Card position. : D04
Device position. :

Значение Card position это и есть позиция диска.

Приостановка зеркальной защиты диска

В **ОСНОВНОМ МЕНЮ** выбрать 3. Work with Disk Unit Recovery

Work with Disk Unit Recovery

Select one of the following:

1. Replace configured unit
2. Disk unit problem recovery procedures
3. Suspend mirrored protection
4. Resume mirrored protection
5. Delete disk unit data
6. Rebuild disk unit data
7. Reclaim IOP cache storage

3. Suspend mirrored protection

Suspend Mirrored Protection

Type option, press Enter.
1=Suspend Mirrored Protection

OPT	Unit	ASP	Serial Number	Type	Model	Resource Name	Status
	1	1	21-D0001	4326	050	DD006	Active
	1	1	68-00002	4326	050	DD005	Active
	5	1	21-00003	4326	050	DD001	Active

5	1	21-00004	4326	050	DD002	Active
6	1	21-00005	4326	050	DD004	Active
6	1	21-00006	4326	050	DD007	Active

Выбрать нужный диск.

Ссылки

[Service Functions \(Version 5\) SY44-5902-05](#), оригинал: [y4459025.pdf](#)

http://sysadminmosaic.ru/as_400/sst

2021-10-14 15:48

